

S. M. No. 1-2310

35

HOW TO SERVICE THE KODAK

WITH RANGE FINDER



EASTMAN KODAK COMPANY • ROCHESTER 4, N.Y.

TABLE OF CONTENTS

| DISASSEMBLY | Page No. |
|--------------------------------------------|---------------------|
| Top Cover and Associated Parts | 3 |
| Parts on Top of Mechanism Plate | 3 |
| Parts Inside Case | 4 |
| Parts on Front of Case | 5 |
| Top Mechanism Plate | 5 |
| REASSEMBLY | |
| Top Mechanism Plate | 6 |
| Parts Inside Case | 6 |
| Parts on Front of Case | 6 |
| Parts on Top of Mechanism Plate | 7 |
| Top Cover and Associated Parts | 8 |
| Focusing the Lens | 8 |
| RANGE FINDER ADJUSTMENT | |
| Focusing | 7 |
| Halving Adjustments | 7 |
| Field Adjustment | 7 |
| Dividing Line Adjustment | 8 |
| Riveting Lens and Window Frames | 8 |
| CORRECTIVE MAINTENANCE | |
| Trouble, Cause, and Remedy Chart | 9 |

● The sequence given in the section on disassembly is recommended for complete disassembly of the camera. However, many parts and/or assemblies can be removed without strict regard to this chronological order. For example: To replace the thumb gear bracket assembly, (Figure 8) it would be necessary to remove only the two retaining screws.

Underlined words in the text indicate nomenclature which appears on illustrations. Such nomenclature, when not followed by a direct figure reference, will be found on the figure indicated in the last preceding figure reference.

Disassembly

TOP COVER AND ASSOCIATED PARTS

Remove the back complete from the camera. Remove the **REWIND KNOB SCREW** (Figure 1), the film indicator **PLATE** and the film indicator plate **FRICITION SPRING**. Remove the **REWIND KNOB COMPLETE** and the **REWIND KNOB SPRING**. Remove the key **POST**.

Remove the **COUNTER KNOB SCREW**, the counter knob thrust **WASHER** and the **COUNTER KNOB**. Remove the **WINDING KNOB SCREW**.

WARNING: Do not remove the **WINDING KNOB COMPLETE** unless necessary. If the knob is removed, the springs and rollers of the key cam **CASE ASSEMBLY** (Figure 2) may become disassembled and a new assembly will have to be installed.

Remove the 3 top **COVER SCREWS**. Exerting downward pressure on the winding knob complete, carefully lift off the **TOP COVER** complete. Remove the top cover **CAP** complete.

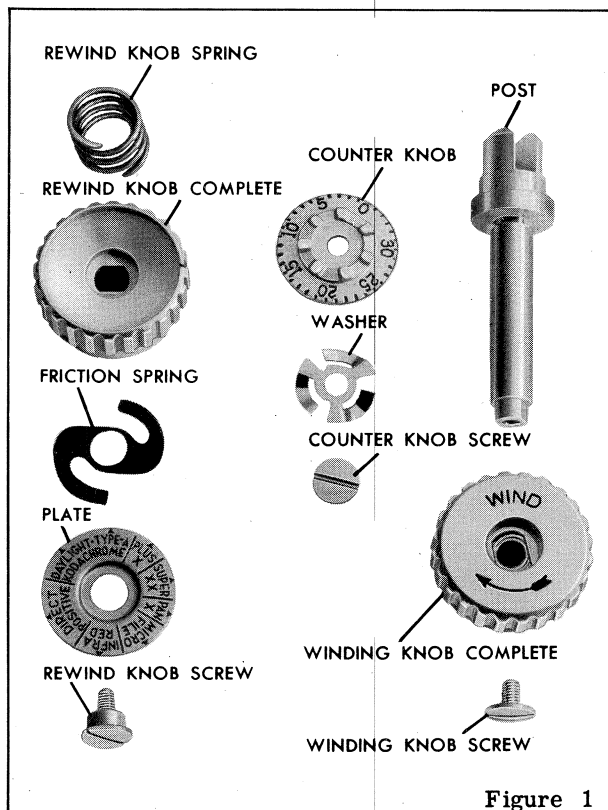


Figure 1

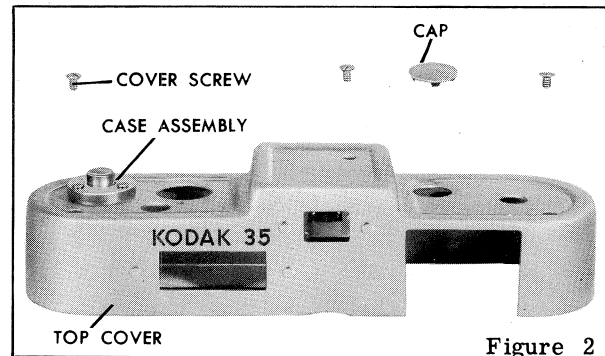


Figure 2

PARTS ON TOP OF MECHANISM PLATE

Remove the left front window **MOUNT ASSEMBLY** (Figure 3) by removing the retaining screw and washer located in the film supply chamber.

NOTE: On earlier model cameras, the left front window **MOUNT ASSEMBLY** is fastened to the camera by two retaining screws which are located directly beneath the extending arm of the mirror bracket assembly. It is necessary to remove the mirror bracket assembly before removing the retaining screws.

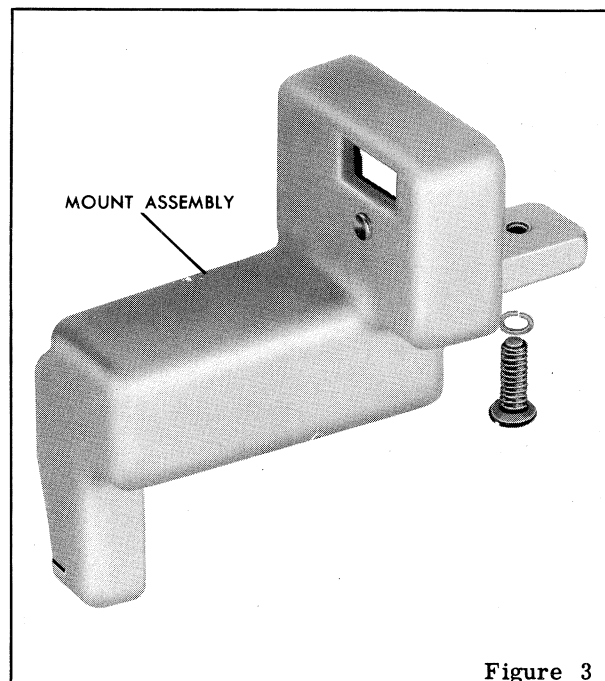


Figure 3

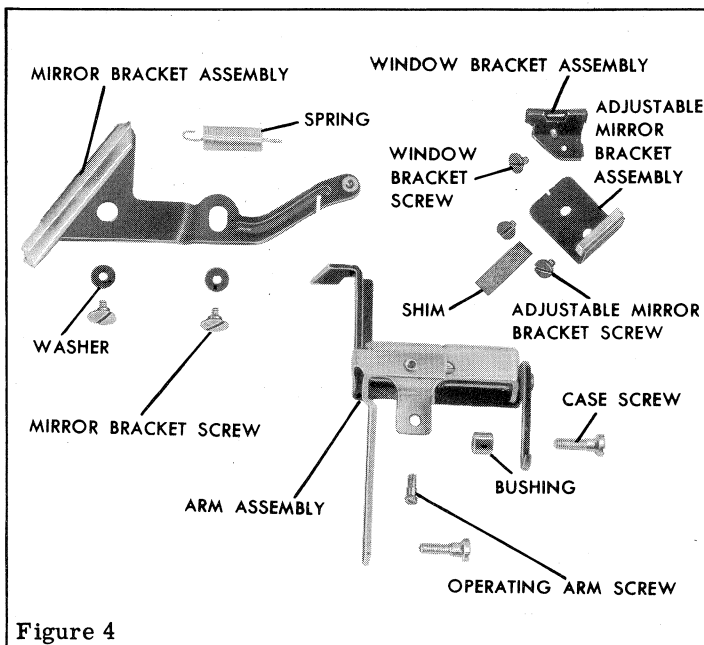


Figure 4

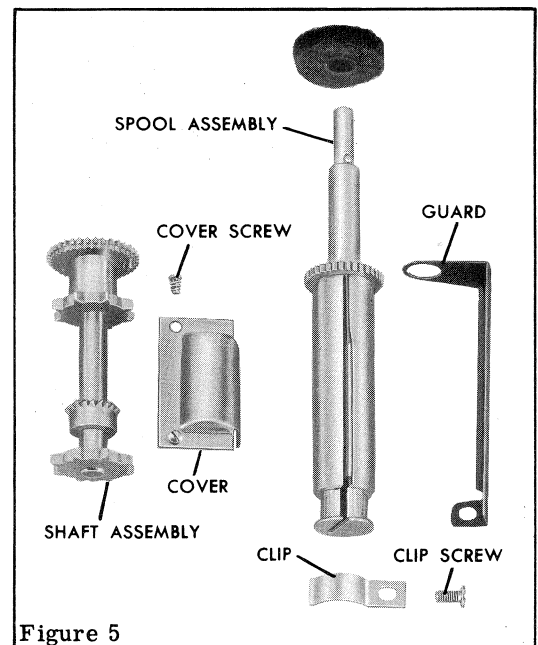


Figure 5

Unhook the mirror bracket SPRING (Figure 4) from the MIRROR BRACKET ASSEMBLY. Remove the two MIRROR BRACKET SCREWS and lift off the mirror bracket assembly. Remove the two mirror bracket WASHERS from the mechanism plate. Unhook the mirror bracket spring from the case post.

Remove the rear WINDOW BRACKET SCREW and lift off the left rear WINDOW BRACKET ASSEMBLY. Remove the two ADJUSTABLE MIRROR BRACKET SCREWS and remove the ADJUSTABLE MIRROR BRACKET ASSEMBLY and SHIM.

PARTS INSIDE CASE

Remove the take-up film spool CLIP SCREW

(Figure 5) and lift off the take-up film spool CLIP. Remove the take-up film SPOOL ASSEMBLY together with the take-up film spool light GUARD.

Remove the two sprocket shaft bevel gear COVER SCREWS and lift off the sprocket shaft bevel gear COVER. Lift off the sprocket SHAFT ASSEMBLY. Remove the sprocket shaft bevel GEAR (Figure 6). This part should not be removed except when necessary as the synchronization of the sprocket shaft drive PINION will be disturbed.

Pull out the film release BUTTON and remove the film release PAWL SPRING and the film release PAWL. Remove the four case lock plate SCREWS (Figure 7) and lift off the case lock PLATE.

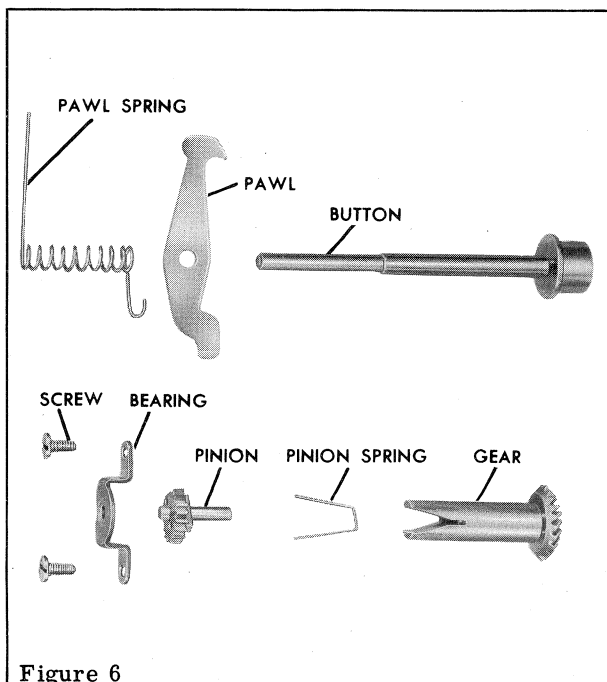


Figure 6

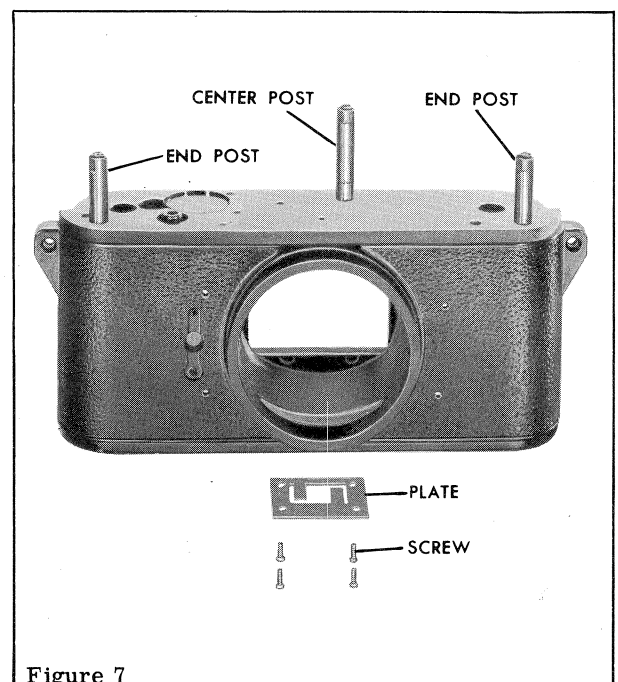


Figure 7

PARTS ON FRONT OF CASE

Remove the **TRIGGER GUARD ASSEMBLY** (Figure 8) by removing the two retaining screws. Remove the thumb gear **BRACKET ASSEMBLY** by removing the two thumb gear **BRACKET SCREWS**. Remove the **OPERATING ARM SCREW** (Figure 4) and the two **CASE SCREWS** and lift off the operating **ARM ASSEMBLY**. Remove the shutter release ring guard **BUSHING** (Figure 8).

Using tool No. 288 remove the shutter retaining **COLLAR** and carefully lift off the shutter. Remove the two shutter release **RING GUARD SCREWS** and lift off the shutter release **RING GUARD ASSEMBLY**.



NOTE: On previous model cameras, the shutter **RELEASE RING GUARD** is fastened to the shutter tube with three retaining screws. Remove these screws before attempting to remove the guard.

Remove the three shutter **TUBE SCREWS** and lift off the shutter **TUBE ASSEMBLY**, the shutter **RELEASE RING COMPLETE**, the shutter release ring plunger **SPRING**, and the shutter release ring **PLUNGER**.

Remove the two sprocket shaft drive pinion bearing **SCREWS** (Figure 6) and lift off the sprocket shaft drive pinion **BEARING**. Lift out the sprocket shaft drive pinion and the sprocket shaft drive **PINION SPRING**.

TOP MECHANISM PLATE

Unscrew and remove the two **END** top cover spacing **POSTS** (Figure 7) and the **CENTER** top cover spacing **POST**. Remove the four mechanism plate **SCREWS** (Figure 9). Remove the key post **BUSHING** and lift the mechanism **PLATE ASSEMBLY** off the case. Remove the counter **GEAR**. Remove the counter **PINION** by first removing the counter pinion **STUD**.

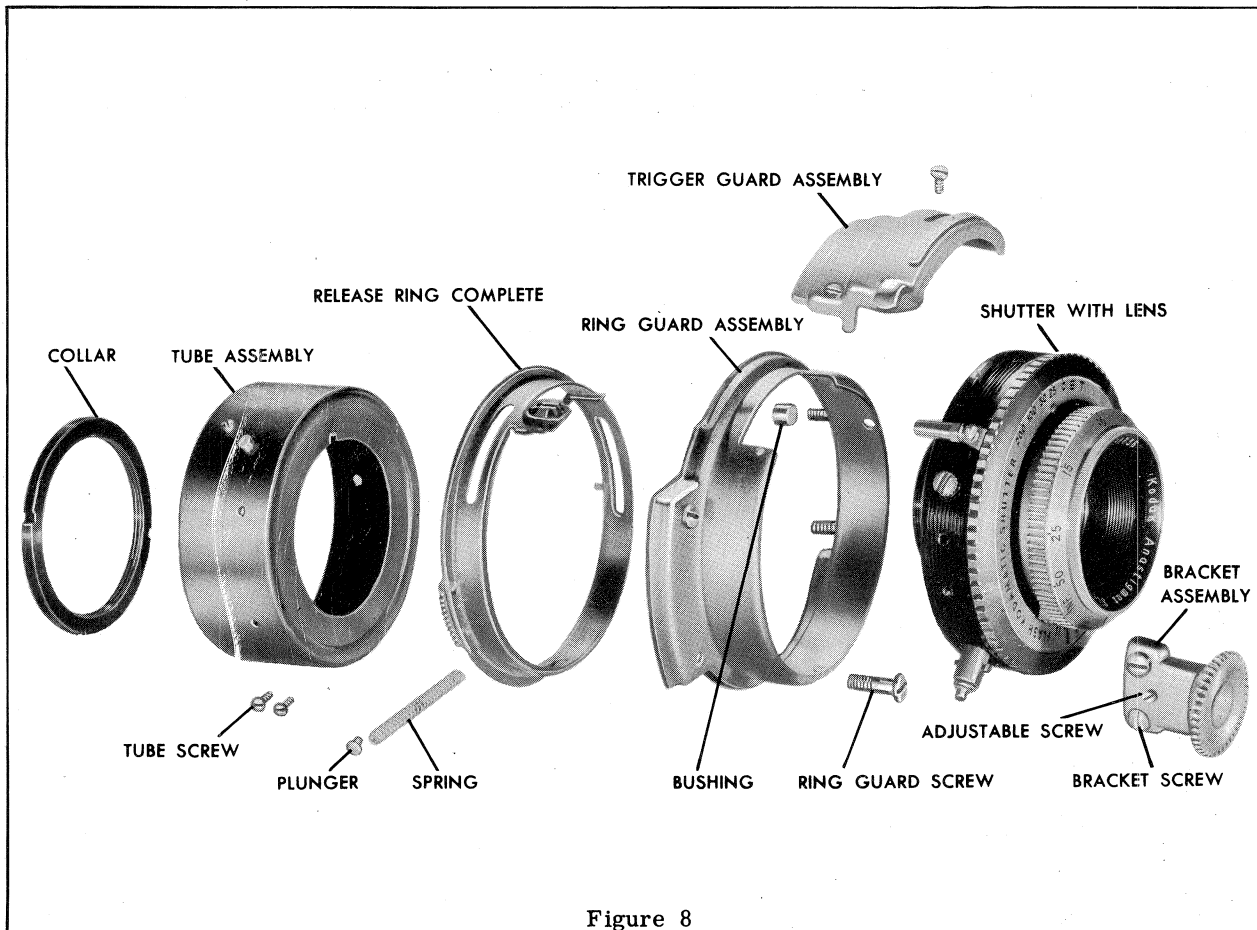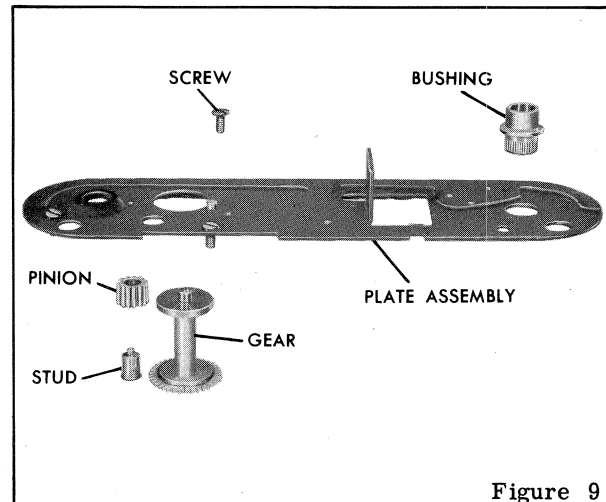

Reassembly

TOP MECHANISM PLATE

Replace the counter PINION (Figure 9) and mesh the counter GEAR with the counter PINION. Place the mechanism PLATE ASSEMBLY in position over the counter gear and on top of the case. Secure the mechanism plate with the four mechanism plate SCREWS. Replace the key post BUSHING. Replace the two END top cover spacing POSTS (Figure 7) and the CENTER top spacing POST.

PARTS INSIDE CASE

Attach the case lock PLATE (Figure 7) to the bottom of the case with the four case lock plate SCREWS.

Insert the film release BUTTON (Figure 6) in the opening in the mechanism plate assembly near the counter gear. Line up the opening in the film release PAWL with the opening for the film release button in the case with the point of the pawl facing up and nearest the opening for the take-up film SPOOL ASSEMBLY (Figure 5). Place the film release PAWL SPRING (Figure 6) under the film release pawl with the hooked end nearest the pawl and with the straight end resting in the groove in the camera case. The film release button is inserted through the pawl, and the spring into the opening in the case. The hooked end of the spring is placed under tension by lifting it up and turning it counter-clockwise and placing it under the notched end of the film release pawl nearest the back frame.

NOTE: Add slight tension on the take-up spool CLIP to prevent the film from slipping on the take-up spool.

Replace the take-up film spool assembly, the take-up film spool light GUARD (Figure 5), the take-up film spool CLIP and fasten them with the take-up film spool CLIP SCREW. The clip is placed under the light guard when being attached.

PARTS ON FRONT OF CASE


Place the ends of the sprocket shaft drive PINION SPRING (Figure 6) into the two holes in the sprocket shaft drive PINION. There must be a slight twist in the spring so as to give a ratchet effect. Insert the spring and the pinion into the case. With the curved side toward the end of the case, attach the sprocket shaft drive pinion BEARING with the two bearing SCREWS.

Then turn the sprocket shaft drive pinion so that one tooth shows at the side of the sprocket shaft drive pinion bearing toward the top. Turn the camera case over and replace the sprocket shaft bevel GEAR (Figure 6). Replace the sprocket SHAFT

ASSEMBLY (Figure 5) so that the stop pin at the top comes to rest against the short end of the film release pawl. Attach the sprocket shaft bevel gear cover with the two retaining screws.

Place the shutter release ring plunger SPRING (Figure 8) and the shutter release ring PLUNGER in the spring groove on the front of the case with the plunger facing the top of the case.

Place the shutter RELEASE RING COMPLETE around the shutter TUBE ASSEMBLY with the TOP SPRING (Figure 10) resting against the stop stud on the shutter tube. Hold the shutter release ring plunger spring in position and line up the screw hole in the shutter tube assembly with the corresponding screw hole in the case. Push the shutter tube onto the case making sure that the shutter release ring PIN rests against the shutter release ring plunger. Attach the shutter tube assembly to the case with the three shutter tube retaining screws. The shutter tube retaining screw, which fits above the plunger, should be replaced first. This will aid in holding the shutter release plunger spring in position. Make sure that the shutter release ring complete is perfectly free to turn against the shutter release ring spring plunger and the shutter release ring spring. The teeth of the shutter release ring GEAR should engage the teeth of the sprocket shaft drive pinion to at least three-quarters of their depth.

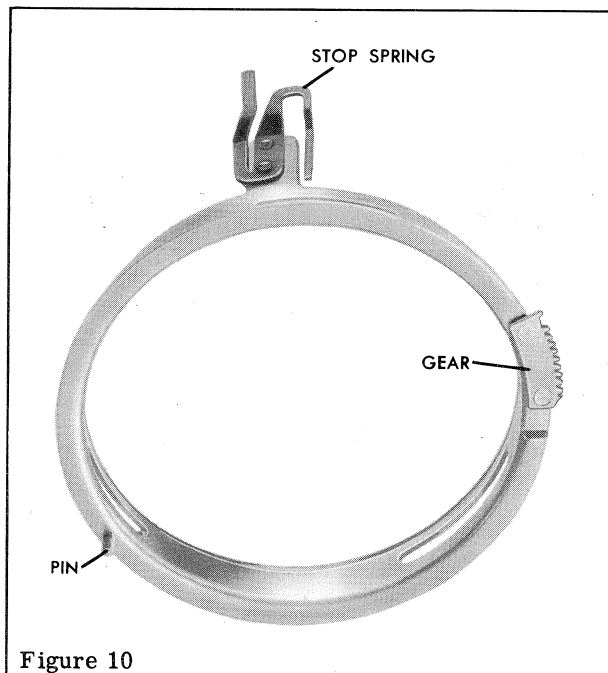

Attach the shutter release **RING GUARD ASSEMBLY** (Figure 8), horizontal support toward the bottom of the case, to the case with the two shutter release **RING GUARD SCREWS**. Place the shutter on the shutter tube assembly and fasten it with the shutter retaining **COLLAR**.

Turn the front lens assembly in as far as it will go, then unscrew the lens until the infinity index mark on the focusing ring is one-quarter turn clockwise from the 1/25-second index mark on the speed and diaphragm index plate. Attach the thumb gear **BRACKET ASSEMBLY** with the two thumb gear **BRACKET SCREWS**. Make sure that there is no play between the thumb gear and the focusing gear, by adjusting the thumb gear **ADJUSTABLE SCREW**.

Place the shutter release ring guard **BUSHING** under the top operating arm screw hole of the shutter release ring guard assembly. Replace the operating **ARM ASSEMBLY** (Figure 4) and fasten it with the two **CASE SCREWS** and the **OPERATING ARM SCREW**. Attach the **TRIGGER GUARD ASSEMBLY** (Figure 8) to the shutter release ring guard assembly with the two retaining screws.

PARTS ON TOP OF MECHANISM PLATE

Attach the left front window **MOUNT ASSEMBLY** (Figure 3) to the case with the retaining washer and screw. Replace the left rear **WINDOW BRACKET ASSEMBLY** (Figure 4) and secure it with the rear **WINDOW BRACKET SCREW**. Place the **ADJUSTABLE MIRROR BRACKET ASSEMBLY** on the mechanism plate and secure it with the two **ADJUSTABLE MIRROR BRACKET SCREWS**. A shim is placed under the adjustable mirror bracket assembly and shellacked into position before the retaining screws are tightened.

Place the **MIRROR BRACKET ASSEMBLY** on the top of the case with the two slots in the bracket

positioned over the screw holes in the mechanism plate. Place the two mirror bracket **WASHERS** under the bracket slots and lined up with the screw holes. Fasten the bracket and the two washers with the two **MIRROR BRACKET SCREWS**. Place one end of the mirror bracket **SPRING** around the slotted portion of the **CENTER top cover spacing POST** (Figure 7) and the other end through the small opening in the mirror bracket. There should be very little tension in this spring, just enough to hold the arm of the mirror bracket assembly all the way back. See that the pivot hole in the bracket does not bind. The fit must be snug, but the bracket must pivot freely with no play. If the screws cannot be tightened down without binding the mirror bracket, remove a small amount of material under the heads of the screws with special tool No. 448. After reassembly and adjustment touch up the heads of the screws next to the mirror with dull black lacquer to prevent reflections. The camera should appear as shown in figure 11.

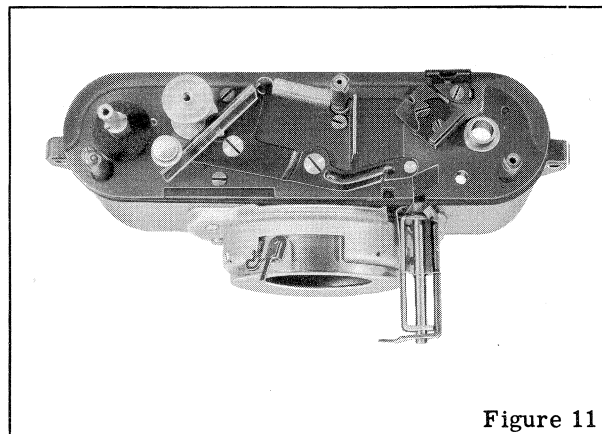


Figure 11

Range Finder Adjustment

FOCUSING

Set the lens mount focusing scale at infinity, then check the range finder against a tall vertical object at least 500 feet away. The upper and lower halves of the image should line up vertically. If they do not, insert a screwdriver in the slot in the base of the adjustable mirror bracket assembly and turn as required to line up the image.

HALVING ADJUSTMENTS

If the dividing line in the range finder does not cut exactly through the center of the image but rather stretches or shortens the image, adjust the tilt of the adjustable mirror by alternately loosening and tightening the two screws in the base of the

adjustable mirror bracket assembly until the complete image is correctly proportioned in the upper and lower halves. After adjusting the tilt of the mirror put shellac on and around the screwheads to prevent them from turning.

FIELD ADJUSTMENT

To make the center of the range finder image agree with the center of the view finder, twist very slightly the end of the mirror bracket assembly where the stud projects downward. Check the adjustment by replacing the top cover assembly on the camera and seating it properly; then, sight through both the range finder and the view finder to see if the image center points are correctly aligned.

DIVIDING LINE ADJUSTMENT

Loosen the screw which holds the left rear window mask to the left rear window bracket and raise or lower the mask as required to give a thin dividing line with the upper and lower halves of the image equal.

NOTE: After making the final adjustments in the range finder, put a small amount of shellac on or around the two adjustable mirror bracket retaining screws to prevent their loosening or turning. Replace the cap screw.

RIVETING LENS AND WINDOW FRAMES

If it is necessary to replace any of the lenses or windows inside the top cover assembly or the left front window mount assembly, use special tool No. 199 for riveting the mounts or frames in place. Care should be taken against tightening the rivets too tightly or the lens or window may be chipped.

TOP COVER AND ASSOCIATED PARTS

Hold the **WINDING KNOB COMPLETE** (Figure 1) carefully in place while replacing the **TOP COVER** complete (Figure 2). Secure the winding knob with the **WINDING KNOB SCREW** (Figure 1). Fasten the top cover complete with the three holding screws. Place the counter knob thrust **WASHER** on the top of the counter gear. Secure the **COUNTER KNOB** with the **COUNTER KNOB SCREW**. Insert the key **POST** in the opening in the case from the inside. Replace the **REWIND KNOB SPRING**, the **REWIND KNOB COMPLETE**, the film indicator plate **FRIC-TION SPRING**, the film indicator **PLATE** and secure

the assembled parts with the retaining screw. Replace the top cover **CAP** complete (Figure 2).

FOCUSING THE LENS

If the shutter has been removed from the camera, the lens focus must be checked and readjusted if necessary.

Remove the back cover. Place the camera on a firm support in such a position that the speed and diaphragm index plate with synchronizer scale is exactly 15 feet from some type of wall chart or calendar suitable for checking the focus precisely. Place a piece of ground glass over the back frame and tape it in place. The etched side must be toward the lens and the glass must be narrow enough to fit between the edge guides in the plane occupied by the film during exposure. With the lens aperture set at $f/3.5$, focus carefully on the chart. If the proper distance mark on the focus mount does not coincide with the index mark on the left front window **MOUNT ASSEMBLY**, the focusing mount must be adjusted to agree with the measured distance.

Loosen the two small screws recessed in the focusing mount. One of these screws is located in the focusing gear and the other in the focusing cam. Hold the front lens mount assembly so that the lens will remain sharply focused on the chart, rotate the focusing mount until the correct distance marking coincides with the index mark on the left front window mount assembly. Tighten the two small screws, being careful not to let the focusing mount shift in position until it is screwed to the front lens mount assembly.

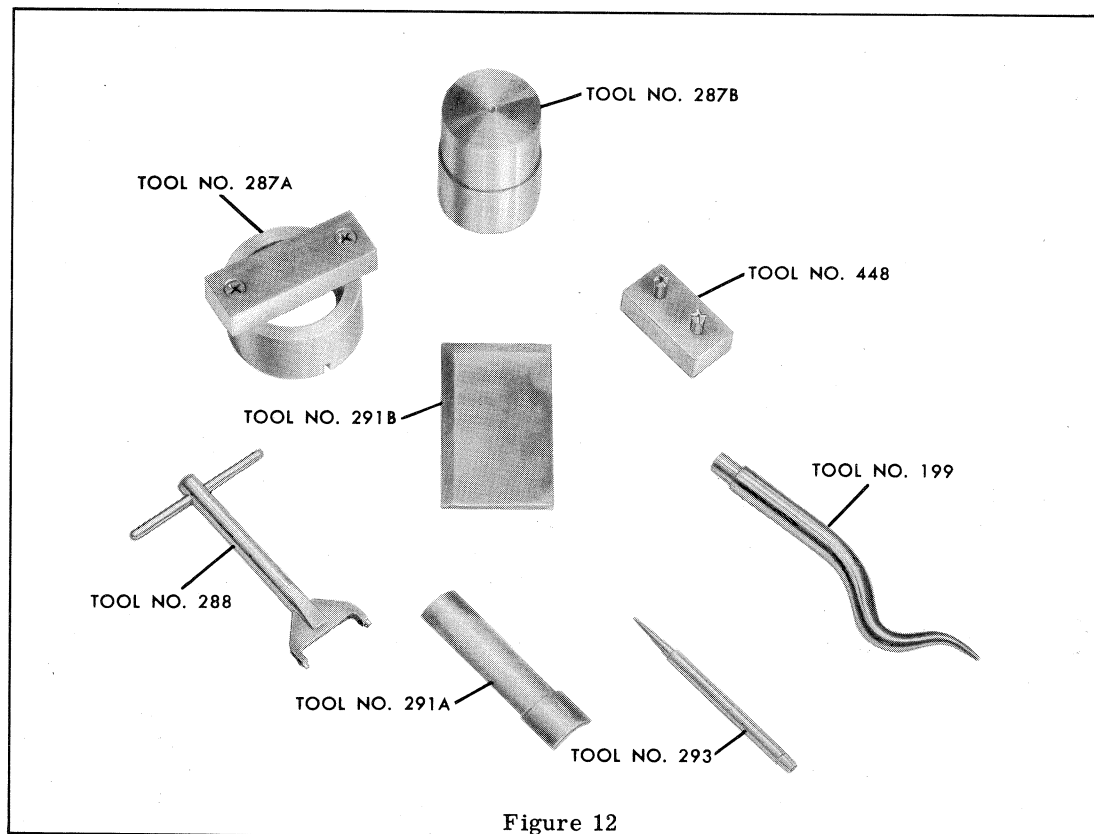


Figure 12

Corrective Maintenance

| TROUBLE | CAUSE | REMEDY |
|-----------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Broken film perforation | Sprocket SHAFT ASSEMBLY (Figure 5) binding. The sprocket shaft assembly may be rough. | The sprocket shaft bevel gear COVER may be bent and is binding the shaft assembly. Smooth off the top surface of the sprocket shaft where it comes in contact with the case, using fine emery cloth. If it is necessary smooth the bearing points of the sprocket shaft. |
| Film is scratched | Burrs around rivets of pressure pad. Burled back frame. Pressure plate burled or dirty. | Turn the rivets down more securely. Stone the back frame slightly making sure that all burrs are removed and then burnish thoroughly. Burnish the pressure plate and clean thoroughly. |
| Unable to lift up the REWIND KNOB COMPLETE (Figure 1) to rewind film | The film has been wound beyond 20 or 36 exposures. | Remove the camera back in a dark room. Disengage the film magazine, and lift up the winding knob. Replace the magazine and camera back. Rewind the film. |
| The film does not hold the take-up film SPOOL ASSEMBLY (Figure 5) while winding | The spring in the take-up spool has lost its tension. | Remove the take-up film spool CLIP (Figure 5). Push the spring out towards the bottom of the spool and reform the spring. |
| Winding is exceptionally hard, shutter does not cock, or shutter does not trip properly | Shutter RELEASE RING COMPLETE is binding. | Use special tools Nos. 287A and B to stretch the shutter release ring complete slightly. |
| Light leak | The spacing between the camera back and the TOP COVER (Figure 2) is too great. Missing screws in the mechanism PLATE ASSEMBLY (Figure 9) and housing. Corners of the camera case or the back are chipped. | Using special tools Nos. 291A and B, refit the back. Replace missing screws. Replace the camera case or the back complete. |
| Focusing lens mount binds | Thumb gear BRACKET ASSEMBLY (Figure 8) is not properly adjusted. | Adjust the thumb gear bracket assembly by loosening the two BRACKET SCREWS and adjusting the ADJUSTABLE SCREW. Tighten the large screws. |
| Negatives out of focus | Range finder out of adjustment. Taking lens out of adjustment. | See page 5. See page 6. |

| TROUBLE | CAUSE | REMEDY |
|-------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Shutter does not set when film is wound into position | <p>The STOP SPRING (Figure 10) has lost its tension.</p> <p>The teeth in the shutter release ring GEAR (Figure 10) due to wear, are not meshing properly with the sprocket shaft drive PINION (Figure 6).</p> | <p>Bend the stop side of the spring slightly towards the stop pin on the shutter tube assembly. Care should be taken during this adjustment as the spring breaks easily. If it should break, remove the two retaining rivets and replace the spring. Use special tool No. 293 for turning the rivets.</p> <p>Remove the two retaining rivets and replace the gear. Use special tool No. 293 for turning the rivets.</p> |
| Latch button turns easily | The lugs on the case lock PLATE (Figure 7) are bent out too far. | Bend the lugs on the case plate in slightly. This will maintain tension between the case assembly and the back complete. |


MARCH 1947

PARTS LIST No. 1-2310

KODAK 35

WITH RANGE FINDER

The dagger (†) indicates parts which are seldom replaced and should be ordered only when needed.
Parts List indentations indicate assembly relationship.

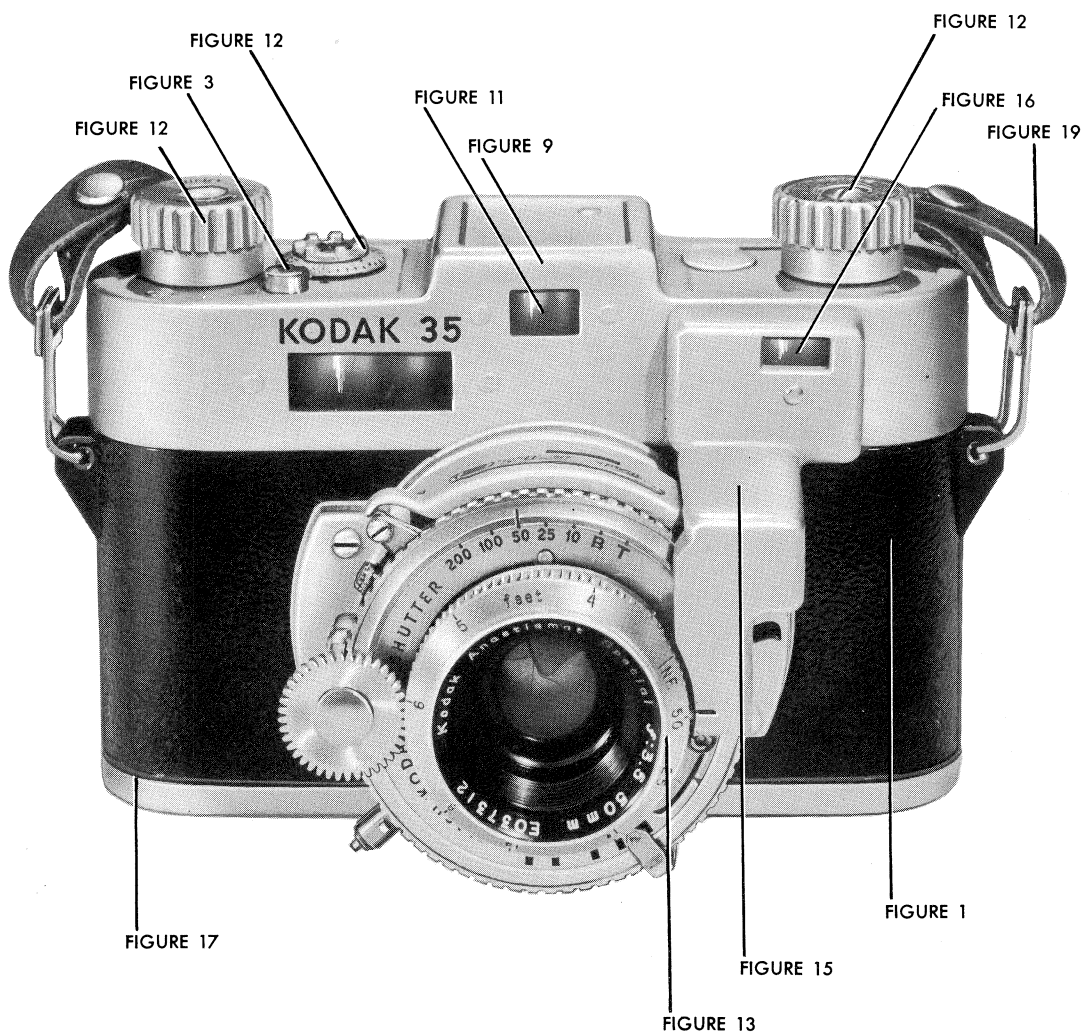

EASTMAN KODAK COMPANY, ROCHESTER 4, N.Y.

MARCH 1947

| FIG. | PART NUMBER | 1 | 2 | 3 | 4 | 5 | 6 | PART NAME | No. REQD. |
|-------|-------------|---|---|---|---|---|---|---------------------------------------------|--------------|
| | 96782 | | | | | | | Camera Complete (Feet) | 1 |
| | 96781 | | | | | | | Case Complete | 1 |
| 1 | 106022 | | | | | | | Case Assembly | 1 |
| 3 | 77244 | | | | | | | Button - Film release | 1 |
| 3 | 66674 | | | | | | | Pawl - Film release | 1 |
| 3 | 66675 | | | | | | | Spring - Film release pawl | 1 |
| 3 | 66680 | | | | | | | Gear - Sprocket shaft bevel | 1 |
| 3 | 66682 | | | | | | | Spring - Sprocket shaft drive pinion | 1 |
| 3 | 66681 | | | | | | | Pinion - Sprocket shaft drive | 1 |
| 3 | 66710 | | | | | | | Bearing - Sprocket shaft drive pinion | 1 |
| 3 | 98419 | | | | | | | Screw - Sprocket shaft drive pinion bearing | 2 |
| 5 | 68237 | | | | | | | Sprocket Shaft Assembly | 1 |
| 5 | 66693 | | | | | | | Cover - Sprocket shaft bevel gear | 1 |
| 5 | 56100 | | | | | | | Screw - Sprocket shaft bevel gear cover | 2 |
| 5 | 77275 | | | | | | | Take-Up Film Spool Assembly | 1 |
| 5 | 87544 | | | | | | | Guard - Take-up film spool light | 1 |
| 5 | 66679 | | | | | | | Clip - Take-up film spool | 1 |
| 5 | 60627 | | | | | | | Screw - Take-up film spool clip | 1 |
| 6 | 77221 | | | | | | | Gear - Counter | 1 |
| 6 | 77276 | | | | | | | Mechanism Plate Assembly | 1 |
| 6 | 85853 | | | | | | | Pinion - Counter | 1 |
| 6 | 66672 | | | | | | | Stud - Counter pinion | 1 |
| | 72245† | | | | | | | Strip - Mechanism plate leak | 1 |
| 6 | 87768 | | | | | | | Screw - Mechanism plate | 4 |
| 6 | 69296 | | | | | | | Bushing - Key post | 1 |
| 5 | 102873 | | | | | | | Washer - Take-up film spool shaft, felt | 1 |
| 13 | 66705 | | | | | | | Plunger - Shutter release ring | 1 |
| 13 | 66707 | | | | | | | Spring - Shutter release ring plunger | 1 |
| 13 | 68684 | | | | | | | Shutter Tube Assembly | 1 |
| 13 | 72258 | | | | | | | Screw - Shutter tube | 3 |
| 13,14 | 69281 | | | | | | | Shutter Release Ring Complete | 1 |
| 14 | 72564 | | | | | | | Spring - Stop | 1 |
| 14 | 82335 | | | | | | | Rivet - Stop spring | 2 |
| 14 | 66703 | | | | | | | Gear - Shutter release ring | 1 |
| 14 | 99286 | | | | | | | Rivet - Shutter release ring gear | 2 |
| 14 | 66704† | | | | | | | Pin - Shutter release ring | 1 |
| 13 | 77280 | | | | | | | Shutter Release Ring Guard Assembly | 1 |
| 8,13 | 100111 | | | | | | | Bushing - Shutter release ring guard | 1 |
| 13 | 98418 | | | | | | | Screw - Shutter release ring guard | 2 |
| 8 | 77269 | | | | | | | Mirror Bracket Assembly | 1 |
| | 77235† | | | | | | | Mirror | 1 |
| 8 | 77257 | | | | | | | Washer - Mirror bracket | 2 |
| 8 | 77247 | | | | | | | Screw - Mirror bracket | 2 |
| 8 | 86977 | | | | | | | Spring - Mirror bracket | 1 |
| 8 | 77274 | | | | | | | Adjustable Mirror Bracket Assembly | 1 |
| 8 | 77287 | | | | | | | Shim - Adjustable mirror bracket | 1 |
| 8 | 77291 | | | | | | | Screw - Adjustable mirror bracket | 2 |
| 8 | 77277 | | | | | | | Operating Arm Assembly | 1 |
| 8 | 83634 | | | | | | | Screw - Operating arm | 1 |
| 8 | 98420 | | | | | | | Screw - Operating arm | 2 |
| 15 | 96780 | | | | | | | Front Window Mount Assembly, Left | 1 |
| 16 | 77252 | | | | | | | Window - Front | 1 |
| 16 | 77234 | | | | | | | Retainer - Front window | 1 |
| 16 | 53873 | | | | | | | Rivet - Front window retainer | 1 |
| 15 | 38877 | | | | | | | Washer - Front window mount screw | 1 |
| 15 | 77263 | | | | | | | Screw - Front window mount | 1 |
| 8 | 77288 | | | | | | | Rear Window Bracket Assembly, Left | 1 |
| 8 | 77291 | | | | | | | Screw - Rear window bracket | 1 |
| 9 | 77272 | | | | | | | Top Cover Complete | 1 |
| 11 | 98232 | | | | | | | Key Cam Case Assembly | 1 |
| 11 | 53873 | | | | | | | Rivet - Key cam case | 3 |
| 11 | 77225 | | | | | | | Window - Front, right | 1 |
| 11 | 77245 | | | | | | | Frame - Front window | 1 |
| FIG. | PART NUMBER | 1 | 2 | 3 | 4 | 5 | 6 | PART NAME | No. REQD. |

MARCH 1947







| FIG. | PART NUMBER | 1 | 2 | 3 | 4 | 5 | 6 | PART NAME | No. REQD. |
|------|----------------------------------------------------------------------------------------|---|---|---|---|---|---|--------------------------------------------------------------------------------------|--------------|
| 11 | 82392 | | | | | | | Washer - Front window frame rivet | 2 |
| 11 | 98422 | | | | | | | Rivet - Front window frame | 2 |
| 11 | 77224 | | | | | | | Window - Rear, left | 1 |
| 11 | 77258 | | | | | | | Frame - Rear window | 1 |
| 11 | 82392 | | | | | | | Washer - Rear window frame rivet | 2 |
| 11 | 98422 | | | | | | | Rivet - Rear window frame | 2 |
| 11 | 77268 | | | | | | | Lens - Eyelet, rear | 1 |
| 11 | 77270 | | | | | | | Mount - Eyelet lens | 1 |
| 11 | 82392 | | | | | | | Washer - Eyelet lens mount rivet | 2 |
| 11 | 98422 | | | | | | | Rivet - Eyelet lens mount | 2 |
| 11 | 66734 | | | | | | | Lens - Negative | 1 |
| 11 | 77243 | | | | | | | Mount - Negative lens | 1 |
| 11 | 82392 | | | | | | | Washer - Negative lens mount rivet | 2 |
| 11 | 98422 | | | | | | | Rivet - Negative lens mount | 2 |
| 9 | 67269 | | | | | | | Screw - Top cover | 3 |
| 12 | 102809 | | | | | | | Winding Knob Complete | 1 |
| 12 | 98431 | | | | | | | Screw - Winding knob | 1 |
| 12 | 77220 | | | | | | | Post - Key | 1 |
| 12 | 101973 | | | | | | | Spring - Rewind knob | 1 |
| 12 | 102810 | | | | | | | Rewind Knob Complete | 1 |
| 12 | 88540 | | | | | | | Spring - Film indicator plate friction | 1 |
| 12 | 88541 | | | | | | | Plate - Film indicator | 1 |
| 12 | 88543 | | | | | | | Screw - Rewind knob | 1 |
| 12 | 69298 | | | | | | | Washer - Counter knob thrust | 1 |
| 12 | 68911 | | | | | | | Knob - Counter | 1 |
| 12 | 98430 | | | | | | | Screw - Counter knob | 1 |
| 1 | 66686 | | | | | | | Plate - Case lock | 1 |
| 1 | 66737 | | | | | | | Screw - Case lock plate | 4 |
| 13 | 95540 | | | | | | | Flash Kodamatic Shutter with Special Kodak Anastigmat <i>f</i> /3.5 Lens (Feet) | 1 |
| 13 | 69294 | | | | | | | Collar - Shutter retaining | 1 |
| 13 | 77273 | | | | | | | Thumb Gear Bracket Assembly | 1 |
| 13 | 104379 | | | | | | | Screw - Thumb gear bracket | 2 |
| 13 | 98416 | | | | | | | Screw - Thumb gear bracket adjusting | 1 |
| 13 | 72255 | | | | | | | Trigger Guard Assembly | 1 |
| 13 | 98419 | | | | | | | Screw - Trigger guard | 2 |
| 9 | 94999 | | | | | | | Top Cover Cap Complete | 1 |
| 19 | 78998 | | | | | | | Shoulder Strap Assembly | 1 |
| 19 | 77109 | | | | | | | Link - Shoulder strap, left | 2 |
| 19 | 77108 | | | | | | | Link - Shoulder strap, right | 2 |
| 19 | 69265 | | | | | | | Stud - Shoulder strap end loop | 2 |
| 17 | 87545 | | | | | | | Back Complete | 1 |
| 18 | 72270 | | | | | | | Film Pressure Pad Assembly | 1 |
| 18 | 29393 | | | | | | | Rivet - Film pressure pad | 2 |
| 18 | 74004 | | | | | | | Film Pressure Pad Plunger Assembly | 1 |
| 18 | 74001 | | | | | | | Guide - Film pressure pad plunger | 1 |
| 18 | 98424 | | | | | | | Rivet - Film pressure pad plunger guide | 2 |
| 18 | 68356 | | | | | | | Bottom Cover Assembly | 1 |
| | 72245† | | | | | | | Strip - Bottom cover leak light | 1 |
| 18 | 33406 | | | | | | | Washer - Bottom cover rivet | 2 |
| 18 | 98425 | | | | | | | Rivet - Bottom cover | 2 |
| 18 | 72244 | | | | | | | Spacer - Magazine | 1 |
| 18 | 66688 | | | | | | | Stud - Case lock | 1 |
| 18 | 98427 | | | | | | | Button - Case lock | 1 |
| 18 | 98431 | | | | | | | Screw - Case lock button | 1 |
| 18 | 96803 | | | | | | | Label - Patent | 1 |
| | NOTE: For camera and shutter with metric plate omit Part Nos. 96782 and 95540 and add: | | | | | | | | |
| | 96783 | | | | | | | Camera Complete (Meters) | 1 |
| 13 | 96854 | | | | | | | Flash Kodamatic Shutter with Special Kodak Anastigmat <i>f</i> /3.5 Lens (Meters) | 1 |
| FIG. | PART NUMBER | 1 | 2 | 3 | 4 | 5 | 6 | PART NAME | No. REQD. |

MARCH 1947







| PART NUMBER | PARTS LIST PAGE NUMBERS | FIGURE No. | PART NUMBER | PARTS LIST PAGE NUMBERS | FIGURE No. | PART NUMBER | PARTS LIST PAGE NUMBERS | FIGURE No. |
|-------------|----------------------------------|---------------|-------------|----------------------------------|---------------|-------------|----------------------------------|---------------|
| 29393 | 3 | 18 | 72258 | 2 | 13 | 83634 | 2 | 8 |
| 33406 | 3 | 18 | 72270 | 3 | 18 | 85853 | 2 | 6 |
| 38877 | 2 | 15 | 72564 | 2 | 14 | 86977 | 2 | 8 |
| 53873 | 2 | 11,16 | 74001 | 3 | 18 | 87544 | 2 | 5 |
| 56100 | 2 | 5 | 74004 | 3 | 18 | 87545 | 3 | 17 |
| 60627 | 2 | 5 | 77108 | 3 | 19 | 87768 | 2 | 6 |
| 66672 | 2 | 6 | 77109 | 3 | 19 | 88540 | 3 | 12 |
| 66674 | 2 | 3 | 77220 | 3 | 12 | 88541 | 3 | 12 |
| 66675 | 2 | 3 | 77221 | 2 | 6 | 88543 | 3 | 12 |
| 66679 | 2 | 5 | 77224 | 3 | 11 | 94999 | 3 | 9 |
| 66680 | 2 | 3 | 77225 | 2 | 11 | 95540 | 3 | 13 |
| 66681 | 2 | 3 | 77234 | 2 | 16 | 96780 | 2 | 15 |
| 66682 | 2 | 3 | 77235 | 2 | | 96781 | 2 | |
| 66686 | 3 | 1 | 77243 | 3 | 11 | 96782 | 2 | |
| 66688 | 3 | 18 | 77244 | 2 | 3 | 96783 | 3 | |
| 66693 | 2 | 5 | 77245 | 2 | 11 | 96803 | 3 | 18 |
| 66703 | 2 | 14 | 77247 | 2 | 8 | 96854 | 3 | 13 |
| 66704 | 2 | 14 | 77252 | 2 | 16 | 98232 | 2 | 11 |
| 66705 | 2 | 13 | 77257 | 2 | 8 | 98416 | 3 | 13 |
| 66707 | 2 | 13 | 77258 | 3 | 11 | 98418 | 2 | 13 |
| 66710 | 2 | 3 | 77263 | 2 | 15 | 98419 | 3 | 3,13 |
| 66734 | 3 | 11 | 77268 | 3 | 11 | 98420 | 2 | 8 |
| 66737 | 3 | 1 | 77269 | 2 | 8 | 98422 | 3 | 11 |
| 67269 | 3 | 9 | 77270 | 3 | 11 | 98424 | 3 | 18 |
| 68237 | 2 | 5 | 77272 | 2 | 9 | 98425 | 3 | 18 |
| 68356 | 3 | 18 | 77273 | 3 | 13 | 98427 | 3 | 18 |
| 68684 | 2 | 13 | 77274 | 2 | 8 | 98430 | 3 | 12 |
| 68911 | 3 | 12 | 77275 | 2 | 5 | 98431 | 3 | 12,18 |
| 69265 | 3 | 19 | 77276 | 2 | 6 | 99326 | 2 | 14 |
| 69281 | 2 | 13,14 | 77277 | 2 | 8 | 100111 | 2 | 8,13 |
| 69294 | 3 | 13 | 77280 | 2 | 13 | 101973 | 3 | 12 |
| 69296 | 2 | 6 | 77287 | 2 | 8 | 102809 | 3 | 12 |
| 69298 | 3 | 12 | 77288 | 2 | 8 | 102810 | 3 | 12 |
| 72244 | 3 | 18 | 77291 | 2 | 8 | 102873 | 2 | 5 |
| 72245 | 2,3 | | 78998 | 3 | 19 | 104379 | 3 | 13 |
| 72255 | 3 | 13 | 82335 | 2 | 14 | 106022 | 2 | 1 |
| | | | 82392 | 3 | 11 | | | |






MARCH 1947

KODAK 35,
WITH RANGE FINDER

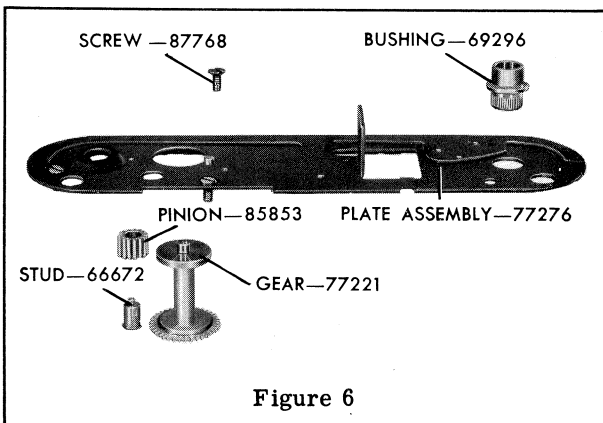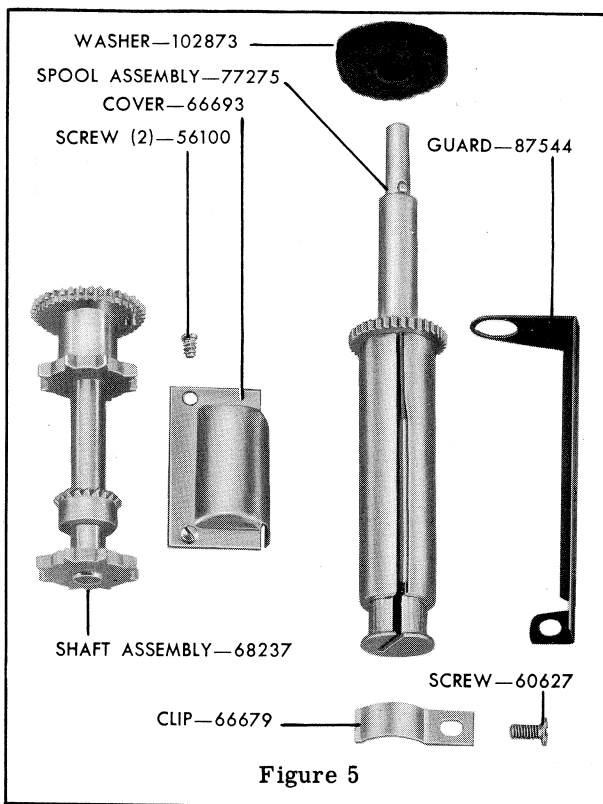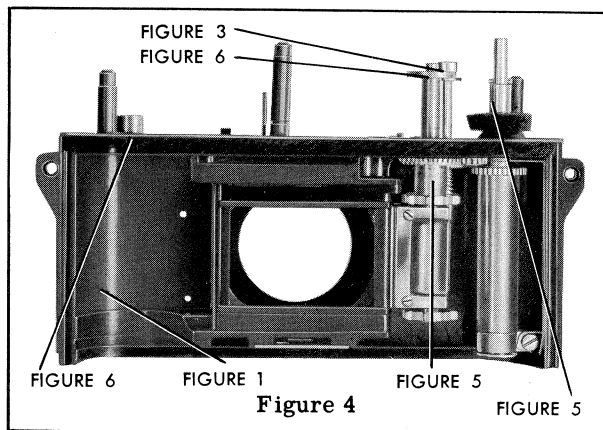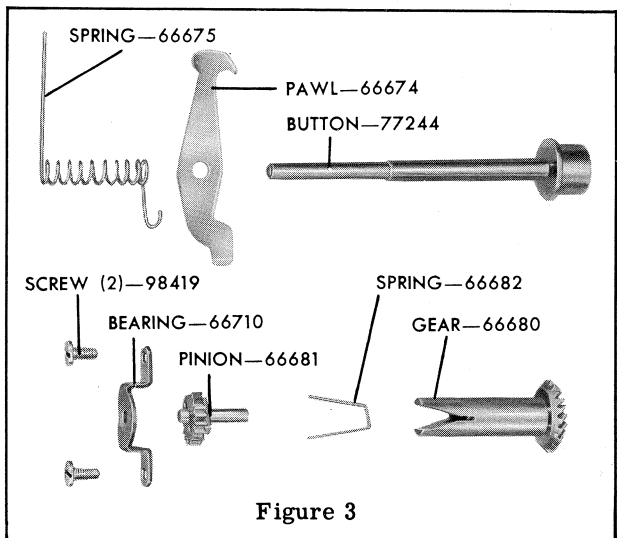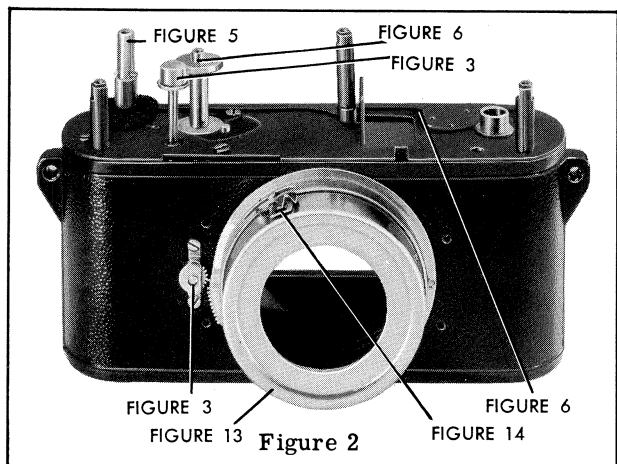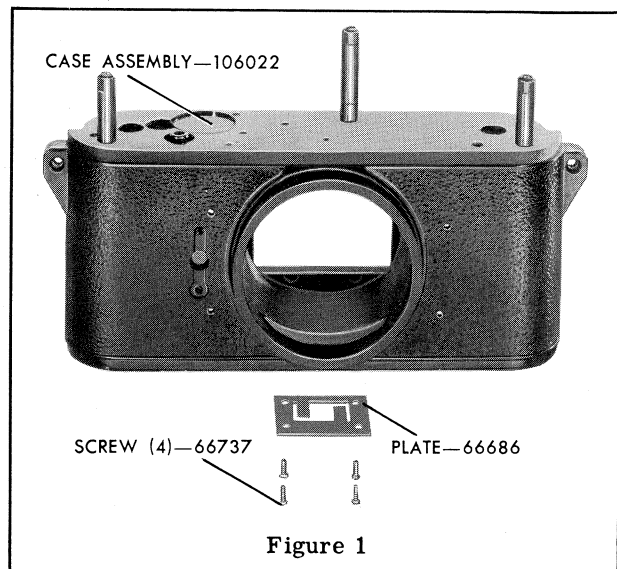

MARCH 1947

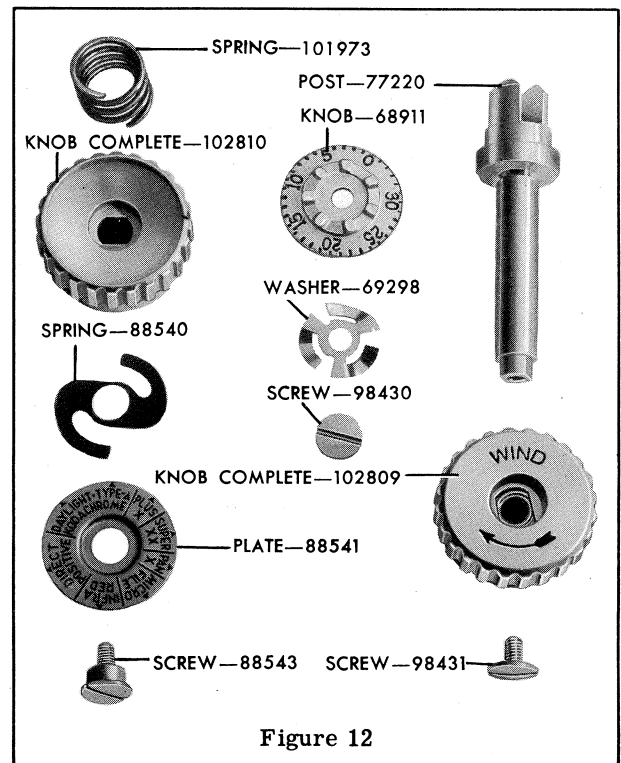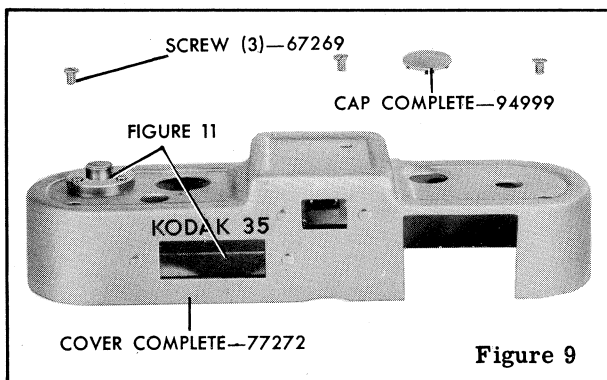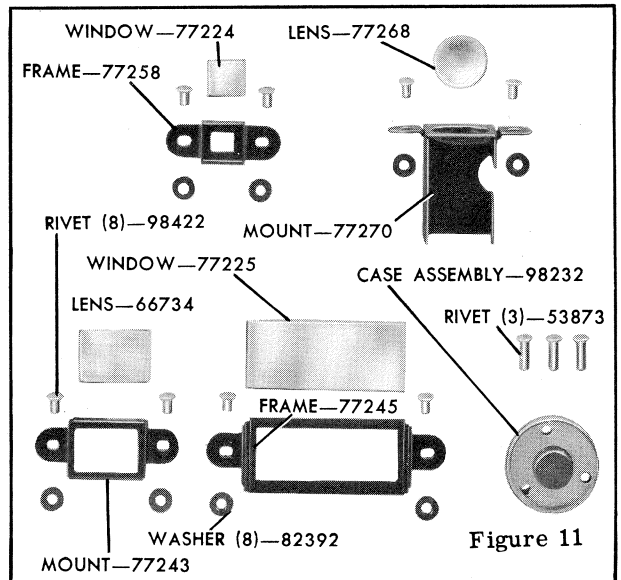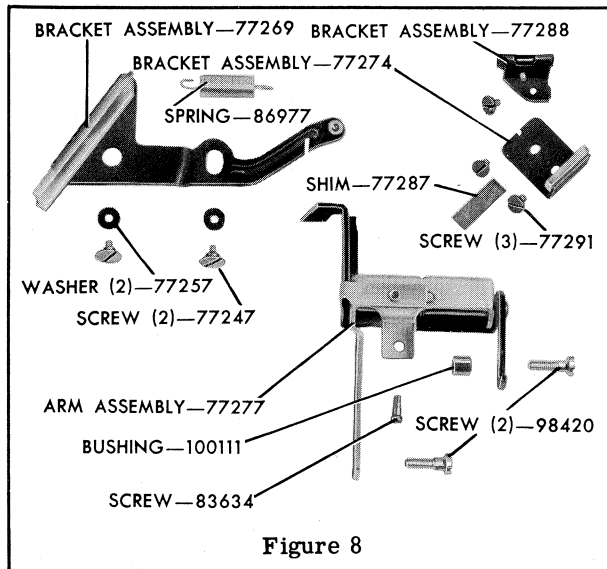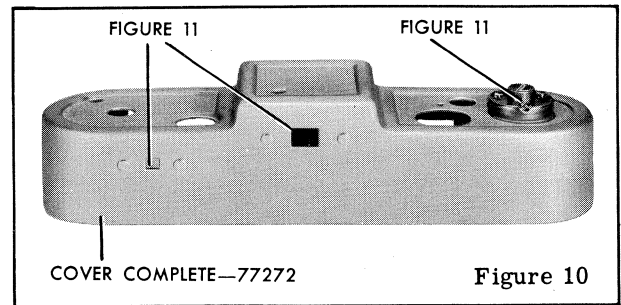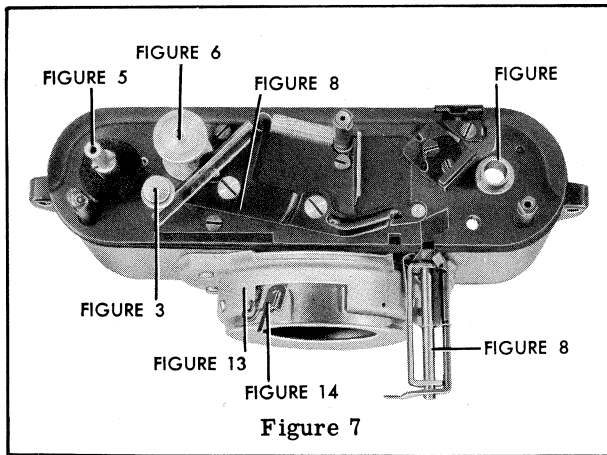

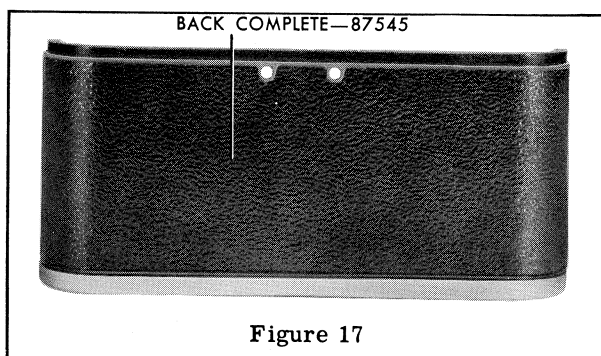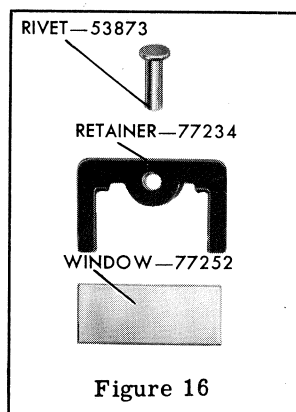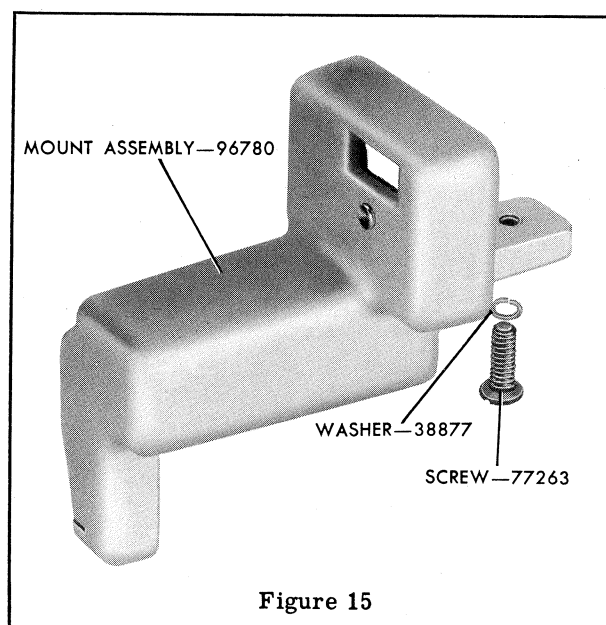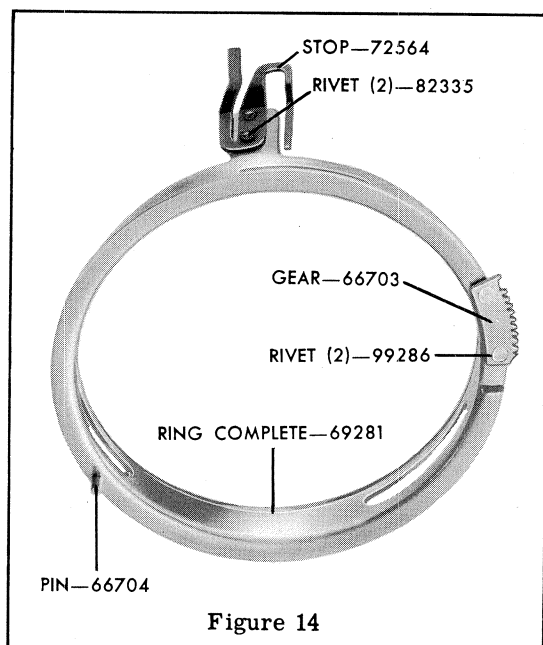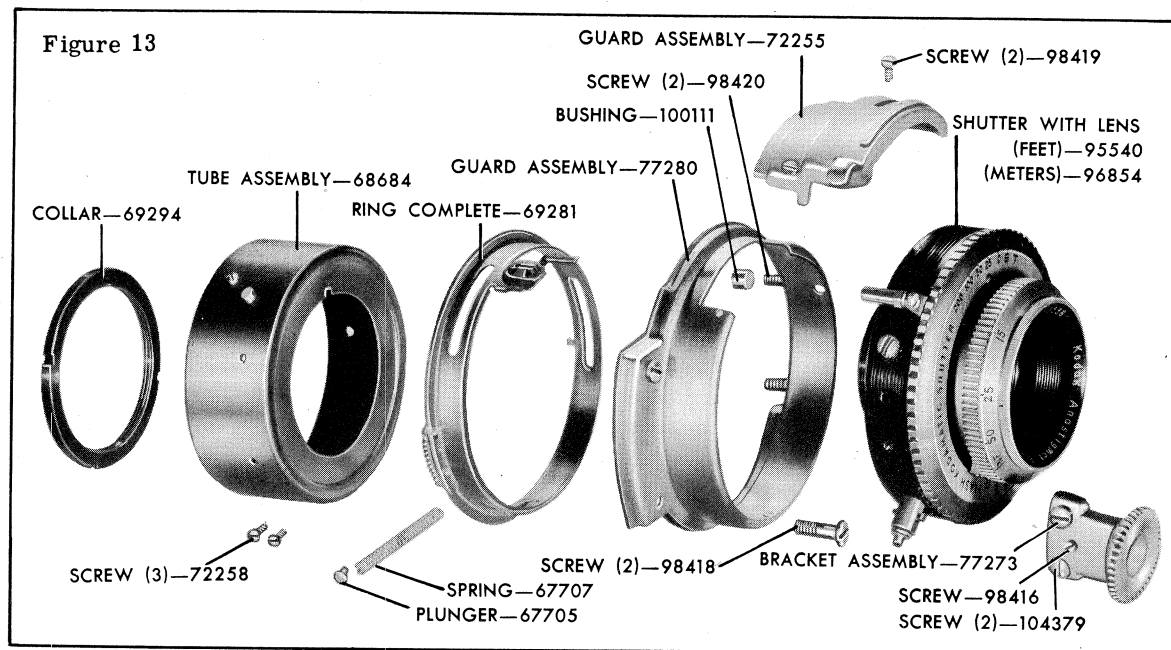

MARCH 1947

